

Aktive vibration isolation

We have two stages: R1 & clock laser are on one stage and R2 is on another stage.

- Manual: <hi #fff200>TODO</hi>
- three modi available: **aktive**, **transportable**, **off**
- Information on **aktive** modus: The stage works, if...
 1. First step: Complete load adjust with "up"-button: load adjust: *on* or *off* or *locked*
 2. Second step: Activate isolation: "down"-button: isolation *on* or *off*
 3. <note important>Important in **aktive modus**: The "four bars" VS, HS, VA, HA should be in the upper third of the range for an adequate control range.</note>
- Information on **transportable** modus: Mechanic is decoupled. Now is working, for example optics screw down, possible.
- Information on **off** modus: -

<hi #fff200>FOTOS</hi>



Movements in the room have influence of the vibration isolation!

From:
<https://iqwiki.iqo.uni-hannover.de/> - IQwiki

Permanent link:
https://iqwiki.iqo.uni-hannover.de/doku.php?id=groups:mg:aktiv_vibration_isolation&rev=1475523271

Last update: **2016/10/03 19:34**

