


Net View

“Connection”-window:

“GPS receiver”-button must be selected.

Push “connect”-button.

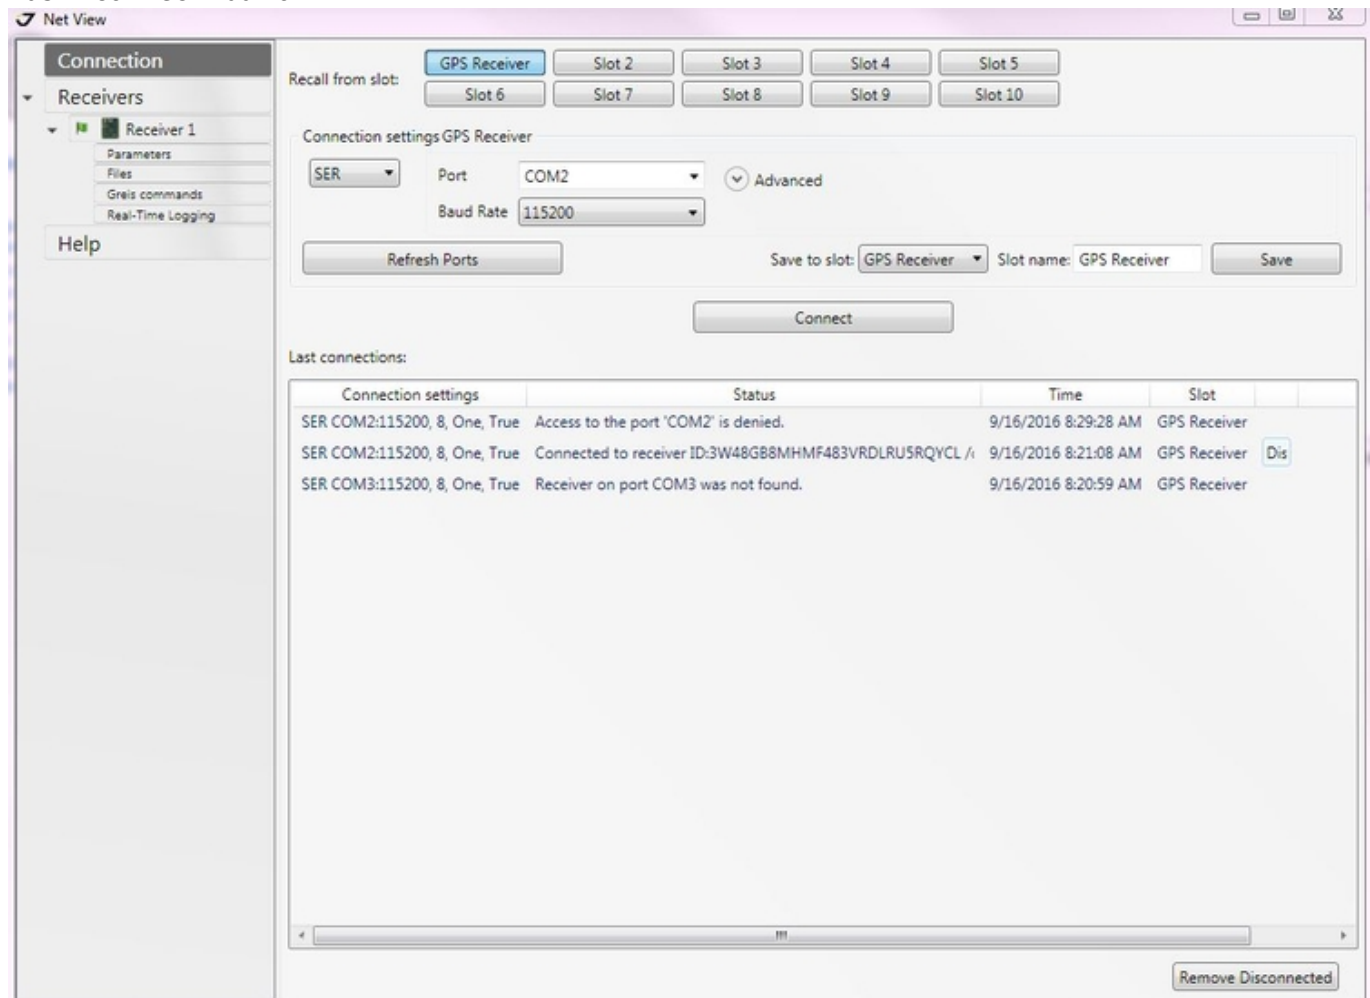

“Receiver”-window:

The “Measurements”-button/setting shows the coordinates of the satellites.

The “Skyplot”-button/setting shows the connections with the satellites and the names.

Net View

Connection

Receivers

- Receiver 1
- Parameters
- Files
- GPS commands
- Real-Time Logging
- Help

Display Name Receiver 1
Receiver Id 3W48GB8MHMF483VRDLRU5RQYCL
Vendor JAVAD GNSS
Serial Number 06539
Firmware Version 3.4.8 Mar.28.2013
Board Version TRE_G3T_3
Model TRE_G3T
UpTime 37d19h30m28s
Memory 0.00 / 0.00 Bytes
Position 52°22'56.15"N 9°43'7.45"E H:117.58m

Connections **COM2:11520..** **Disconnect**

Reports **Actions** **Rover** **Spectrums**

Measurements **Sky plot** **Spectrums** **Cycle Slips** **Orientation** **Options** **Base/Rover** **Settings**

Sys	Num	El	Az	CA	P1	P2	L2C	L5	L1C	Track Tim	Status	Cont. Track L1/L2
GPS	20*	29	104	45	31	31				01:31:17	0	/
GPS	21*	67	160	52	45	45				02:30:44	0	/
GPS	18*	8	152	39	17	17				00:19:09	0	/
GPS	29*	43	76	50	40	40	47			04:50:45	0	/
GPS	25*	16	136	40	24	24	40	45		06:14:02	0	/
GPS	26*	65	286	55	46	46	53	56		02:17:46	0	/
GPS	16*	36	302	46	34	34				01:07:54	0	/
GPS	5	19	46	42	28	28	40			01:47:45	0	/
GPS	27*	11	264	34	20	20	41	44		00:29:09	0	/
GPS	31*	31	218	47	35	35	44			03:21:57	0	/
GLO	19/3*	18	56	42	40	36	38			04:46:05	0	/
GLO	4/6	21	60	44	43	38	37			01:07:35	0	/
GLO	21/4*	47	256	52	51	46	47			01:44:09	0	/
GLO	11/0*	57	296	54	52	46	47			01:53:11	0	/
GLO	7/-5*	75	14	55	54	50	52			03:10:48	6	/
GLO	5/1	8	108	33	32	30	33			00:13:56	0	/
GLO	20/2*	71	26	49	47	48	49			03:14:13	0	/
GLO	3/5	12	6	44	42	33	35			01:56:52	0	/
GLO	10/-7	48	196	52	50	41	43			02:53:30	0	/

Links

Number of satellites 19
 GPS - 10 GLO - 9
 GAL - 0 QZSS - 0
 COMPASS - 0
 SBAS(WAAS/EGNOS) - 0
 Unknown - 0

Net View

Connection

Receivers

- Receiver 1
- Parameters
- Files
- GPS commands
- Real-Time Logging
- Help

Display Name Receiver 1
Receiver Id 3W48GB8MHMF483VRDLRU5RQYCL
Vendor JAVAD GNSS
Serial Number 06539
Firmware Version 3.4.8 Mar.28.2013
Board Version TRE_G3T_3
Model TRE_G3T
UpTime 37d19h32m13s
Memory 0.00 / 0.00 Bytes
Position 52°22'56.14"N 9°43'7.46"E H:117.90m

Connections **COM2:11520..** **Disconnect**

Reports **Actions** **Rover** **Spectrums** **Can't initialize spectrum**

Measurements **Sky plot** **Spectrums** **Cycle Slips** **Orientation** **Options** **Base/Rover** **Settings**

Sky plot

Select systems

☒ GPS (G) ☒ GLO (R) ☐ GAL (S) ☐ SBAS(WAAS/EGNOS) (S) ☐ QZSS (S)
☐ COMPASS (S) ☐ Unknown (S)

You can change the reference frequency from "Empfänger 1" under "Parameter"-window → "Advanced"-button → "External frequency"-button.

Net View

Connection

Receivers

Receiver 1

Parameters

Files

Greis commands

Real-Time Logging

Help

General Log-files TriPad Positioning Base Rover Ports Networking Event Advanced

Anti-Interference Multipath Reduction Loop Management External Frequency Raw Data Management Attitude parameters Asic parameters

Frequency Input and Output Parameters

Input Frequency Amplitude

Input Frequency Value

Input Frequency Status

Frequency Mode

Output Frequency Value

Oscillator Parameters

Oscillator Frequency Offset...

Calibrator

Calibrator Mode

Use Calibrator Measurements

Calibrator Measurements Availability

/par/calib/soft/opt

/par/calib/soft/run

/par/calib/soft/use

/par/calib/soft/weight

Refresh Apply

Save Configuration to Script

Greis commands mode, press Ctrl for Help Tip, Ctrl+Space for print/set rotation

Send Clear Start Logging Load Script

From:

<https://iqwiki.iqo.uni-hannover.de/> - IQwiki

Permanent link:

<https://iqwiki.iqo.uni-hannover.de/doku.php?id=groups:mg:netview&rev=1474199430>

Last update: **2016/09/18 11:50**

