


NetView

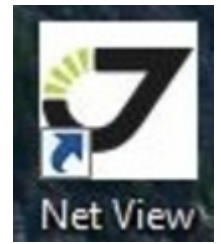

Net View




For starting Net View klick only once and wait, the program needs time 😊 !



If Net View doesn't start, then restart the computer!

"Connection"-window:


"GPS receiver"-button must be selected.
Push "connect"-button.

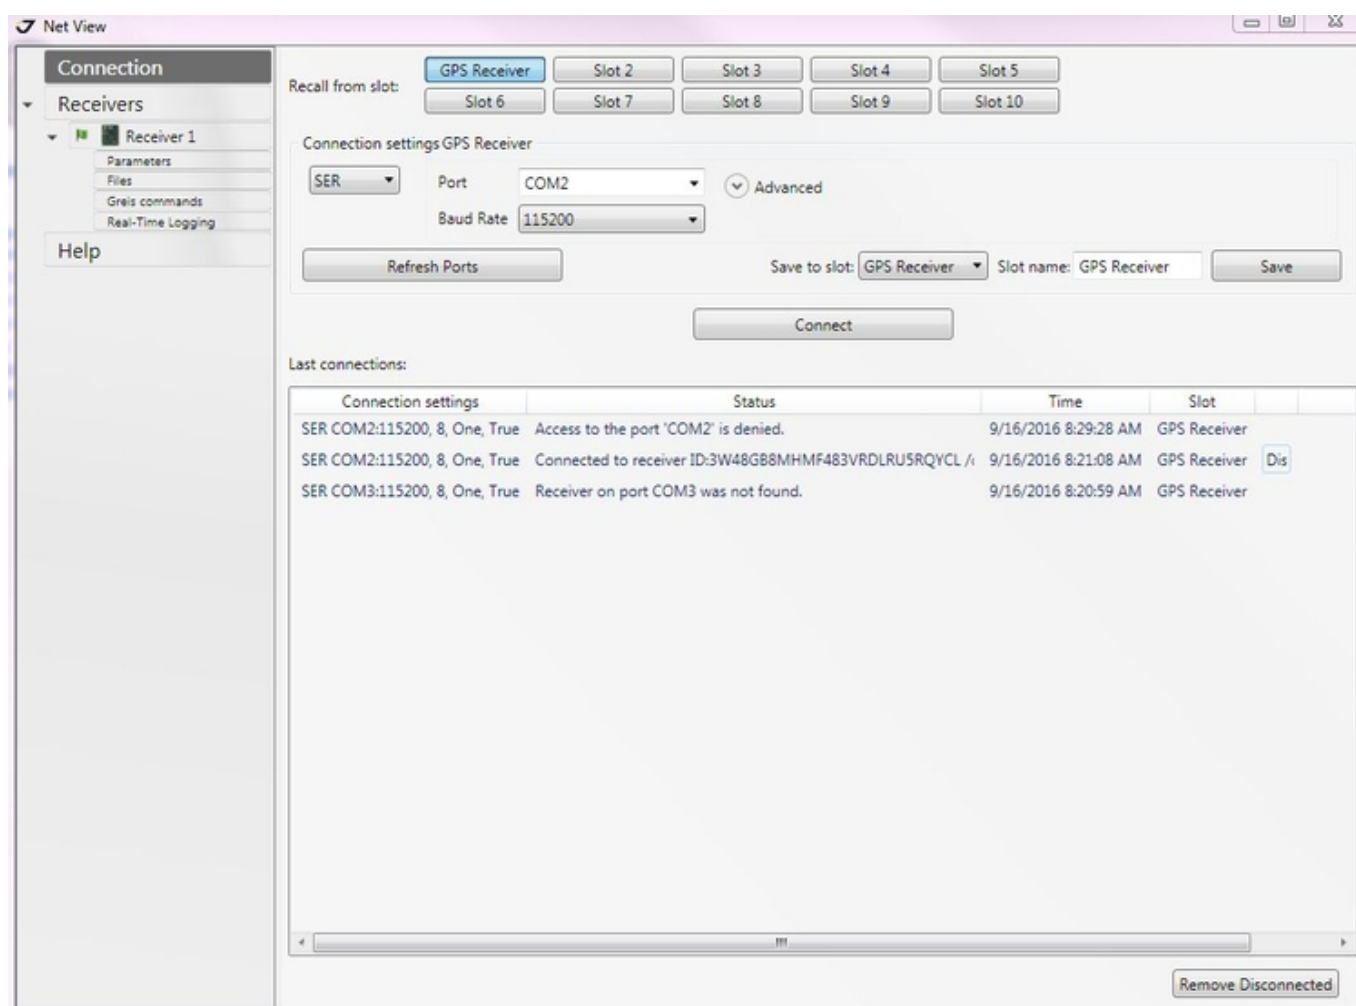


“Receiver”-window:


The “Measurements”-button/setting shows the coordinates of the satellites.

The “Skyplot”-button/setting shows the connections with the satellites and the names.

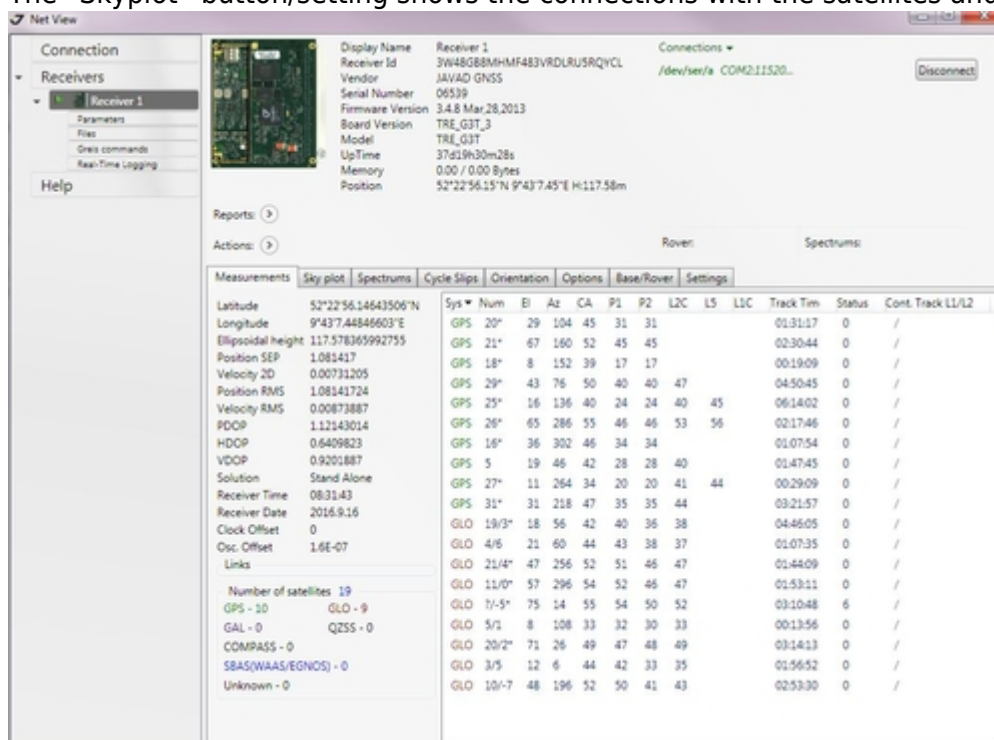

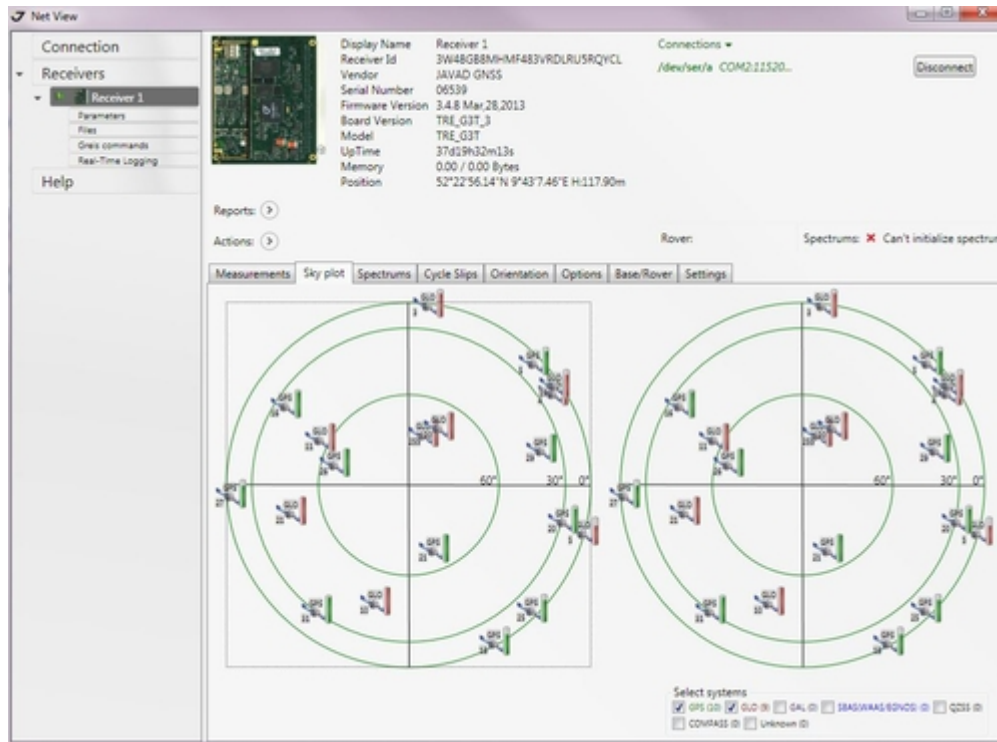

You can change the reference frequency from “Empfänger 1” under “**Parameter**”-window → “Advanced”-button → “External frequency”-button.

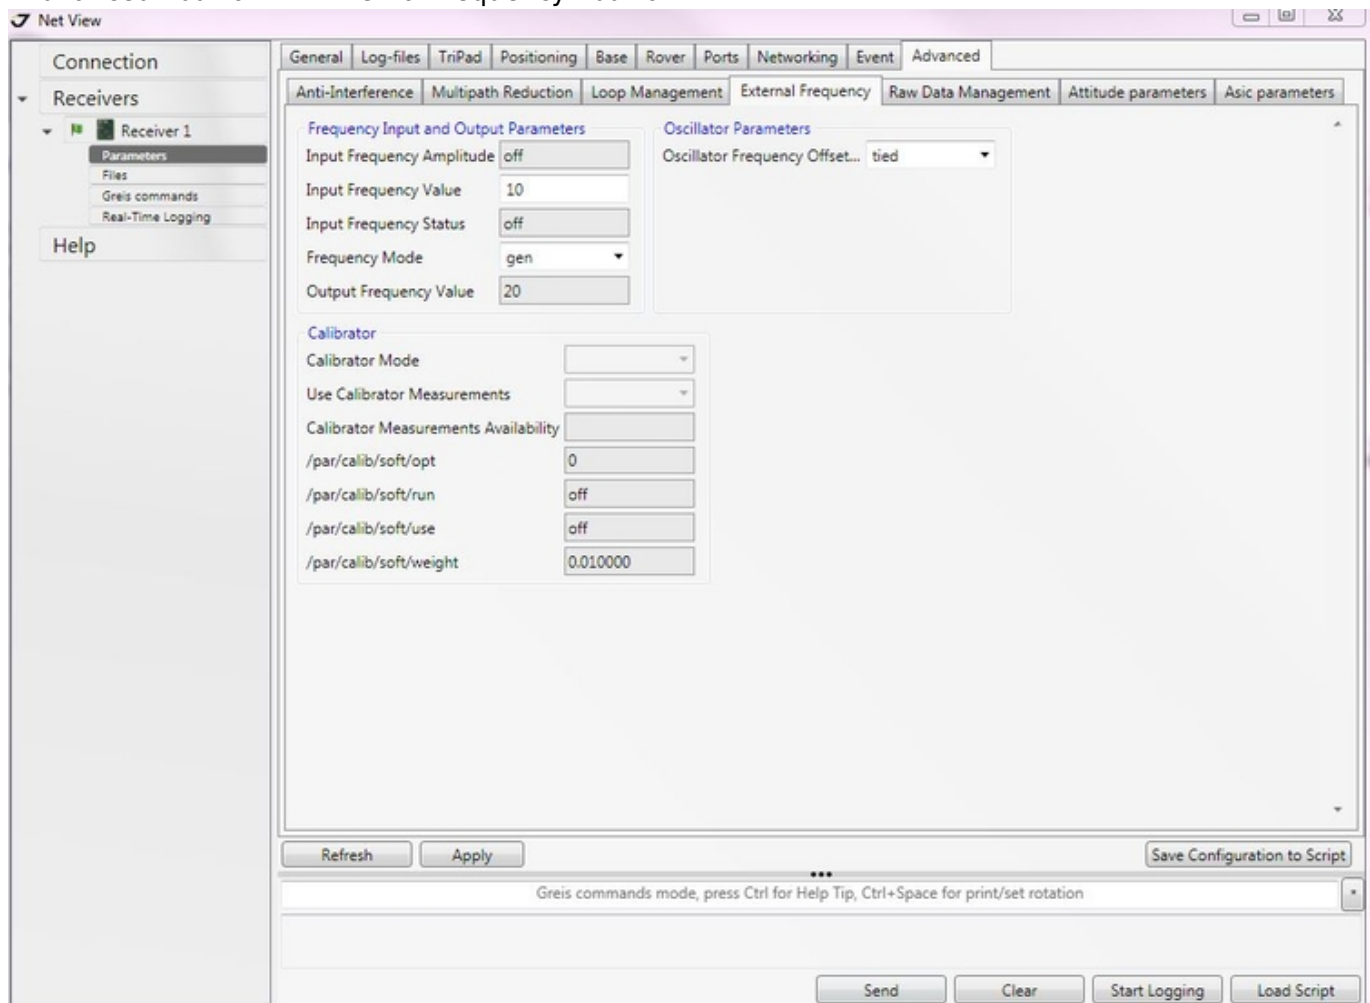

Last update: 2020/01/14 09:39 groups:mg:private:resonatoren:reslabcomputers:netview <https://iqwiki.iqo.uni-hannover.de/doku.php?id=groups:mg:private:resonatoren:reslabcomputers:netview&rev=1578994762>



From:
<https://iqwiki.iqo.uni-hannover.de/> - IQwiki

Permanent link:
<https://iqwiki.iqo.uni-hannover.de/doku.php?id=groups:mg:private:resonatoren:reslabcomputers:netview&rev=1578994762>

Last update: **2020/01/14 09:39**

