


Fiber Comb Control

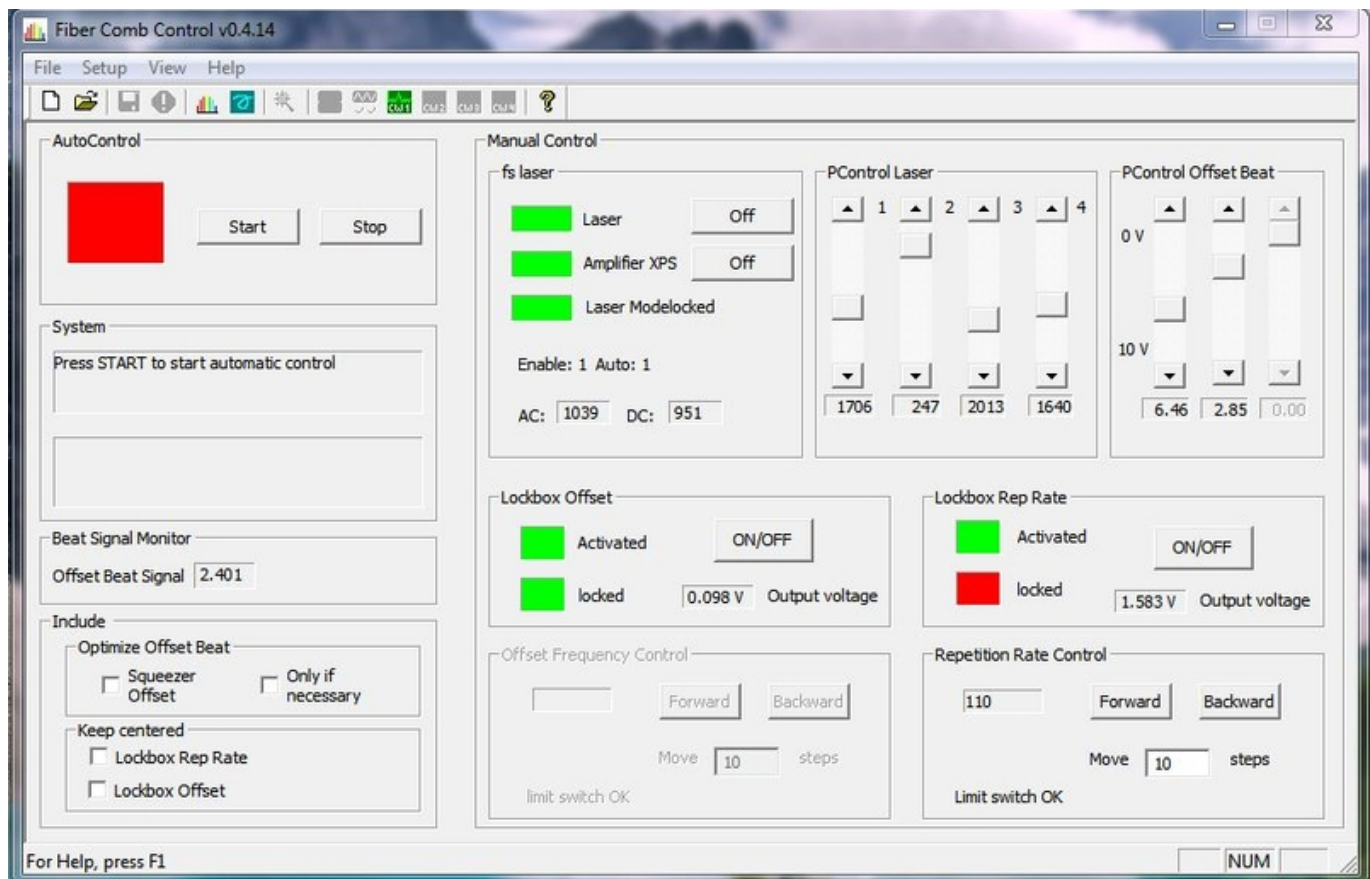

If this doesn't start: Maybe COM Port wrong (should be COM1 in device manager)

Start NI Device Monitor; if NI card (PCI 6221) is not available : Maybe a Re-Install of NIDAQ helps (in the software/comb folder) : enables PCI-6221 card

From:

<https://iqwiki.iqo.uni-hannover.de/> - IQwiki

Permanent link:

https://iqwiki.iqo.uni-hannover.de/doku.php?id=groups:mg:fiber_comb_control&rev=1476719154

Last update: 2016/10/17 15:45

