


Labelling of the cables

Labelling of the T-Regler cable

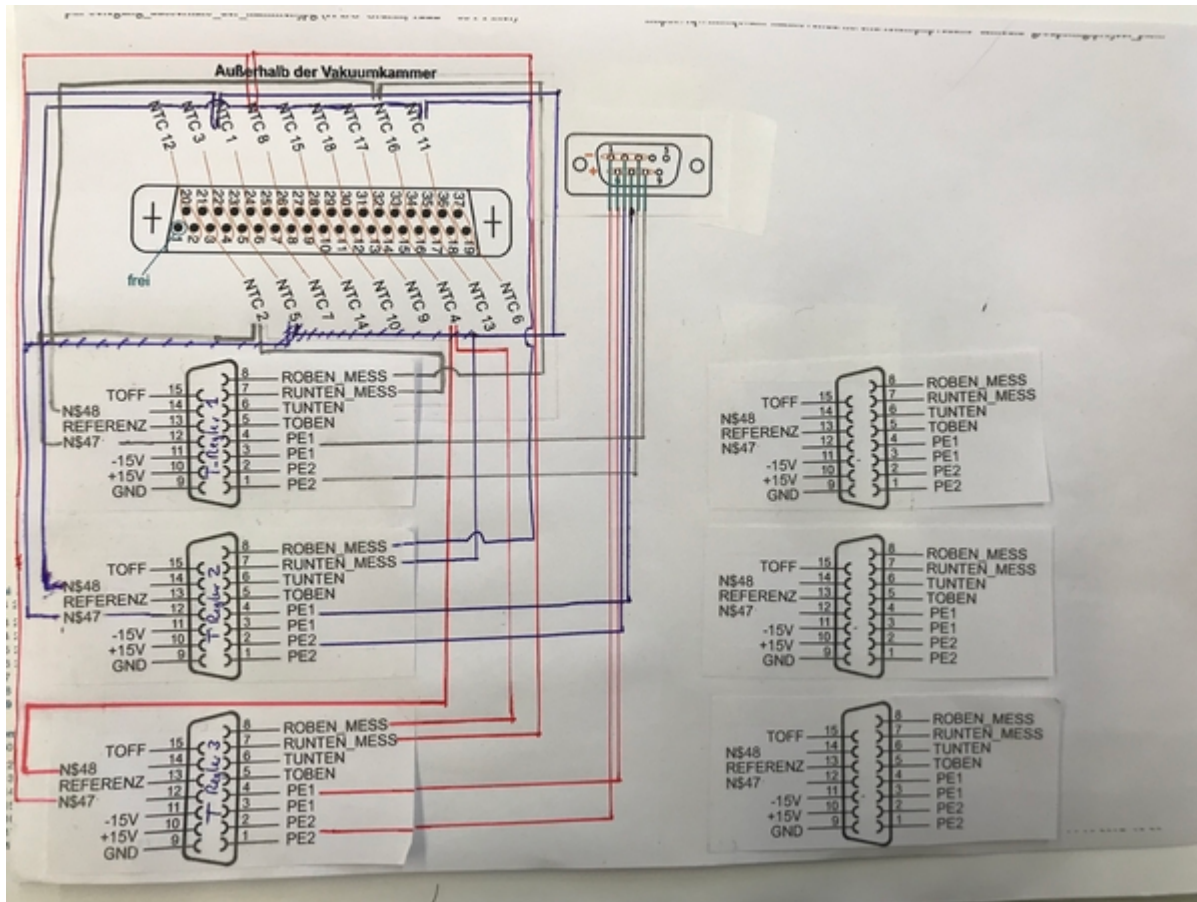

Peltierelemente werden an der Oberseite warm, wenn Output-Pins 3,2 sowie 1 an positiver Spannung angeschlossen ist.

Benutzt wird der Kabeltyp:

- Für Peltierelemente: *LAPP Kabel Stuttgart Unitronic LIYCY 8×0.14*; Schirmung von alle Adern gleichzeitig
- Für In-loop-NTC's: *LAPP Kabel Stuttgart Unitronic LIYCY 6×0.14*; Schirmung von alle Adern gleichzeitig
- Für Out-of-loop-NTC's: *LAPP Kabel Stuttgart Unitronic LIYCY 16×0.14*; Schirmung von alle Adern gleichzeitig


Device	Input: Male Connector	Description	Input: Pin	Cable Color	Output: Female Connector	Output: Pin	Cable-typ (Length)	Comment	NTC number
T-Regler 1	Sub-D-15 (1)	PE 2	1		Sub-D-9	3	8×0.14 (3m)	Use two wires for each Input-pin. Each Output-pin have four wires!	
		PE 2	2			3			
		PE 1	3			8			
		PE 1	4			8			
		RUNTEN_MESS	7		Sub-D-37	3	6×0.14 (3m)		NTC 2
		ROBEN_MESS	8			16			NTC 16
		N47	12			21			NTC 2
		N48	14			34			NTC 16
T-Regler 2	Sub-D-15 (2)	PE 2	1		Sub-D-9	2	8×0.14 (3m)	Use two wires for each Input-pin. Each Output-pin have four wires!	
		PE 2	2			2			
		PE 1	3			7			
		PE 1	4			7			
		RUNTEN_MESS	7		Sub-D-37	6	6×0.14 (3m)		NTC 1
		ROBEN_MESS	8			18			NTC 11
		N47	12			24			NTC 1
		N48	14			36			NTC 11
T-Regler 3	Sub-D-15 (3)	PE 2	1		Sub-D-9	1	8×0.14 (3m)	Use two wires for each Input-pin. Each Output-pin have four wires!	
		PE 2	2			1			
		PE 1	3			6			
		PE 1	4			6			
		RUNTEN_MESS	7		Sub-D-37	8	6×0.14 (3m)		NTC 8
		ROBEN_MESS	8			15			NTC 4
		N47	12			26			NTC 8
		N48	14			33			NTC 4

Device	Input: Male Connector	Description	Input: Pin	Cable Color	Output: Female Connector	Output: Pin	Cable-typ (Length)	Comment	NTC number
Out-of-Loop-Monitoring-Box	Sub-D-25	NTC 3	14	1	Sub-D-37		16×0.14 (3m)		NTC 3
		NTC 5	2					NTC 5	
		NTC 6	3					NTC 6	
		NTC 7	4					NTC 7	
		NTC 9	5					NTC 9	
		NTC 10	6					NTC 10	
		NTC 12	7					NTC 12	
		NTC 13	8					NTC 13	
		NTC 14	9					NTC 14	
		NTC 15	10					NTC 15	
		NTC 17	11				16×0.14 (3m)	NTC 17	
		NTC 18	12					NTC 18	
			13						
		free	13				not used / not connected!		

Example of soldering



Schirmung der Kable an die Buchse auf der Seite des Reglers/Sub-D-15 Konnektor löten. Und die anderen Sub-D-15 Pins mit Schrumpfschlauch isolieren. Durchsichtigen Schrumpfschlauch verwenden!

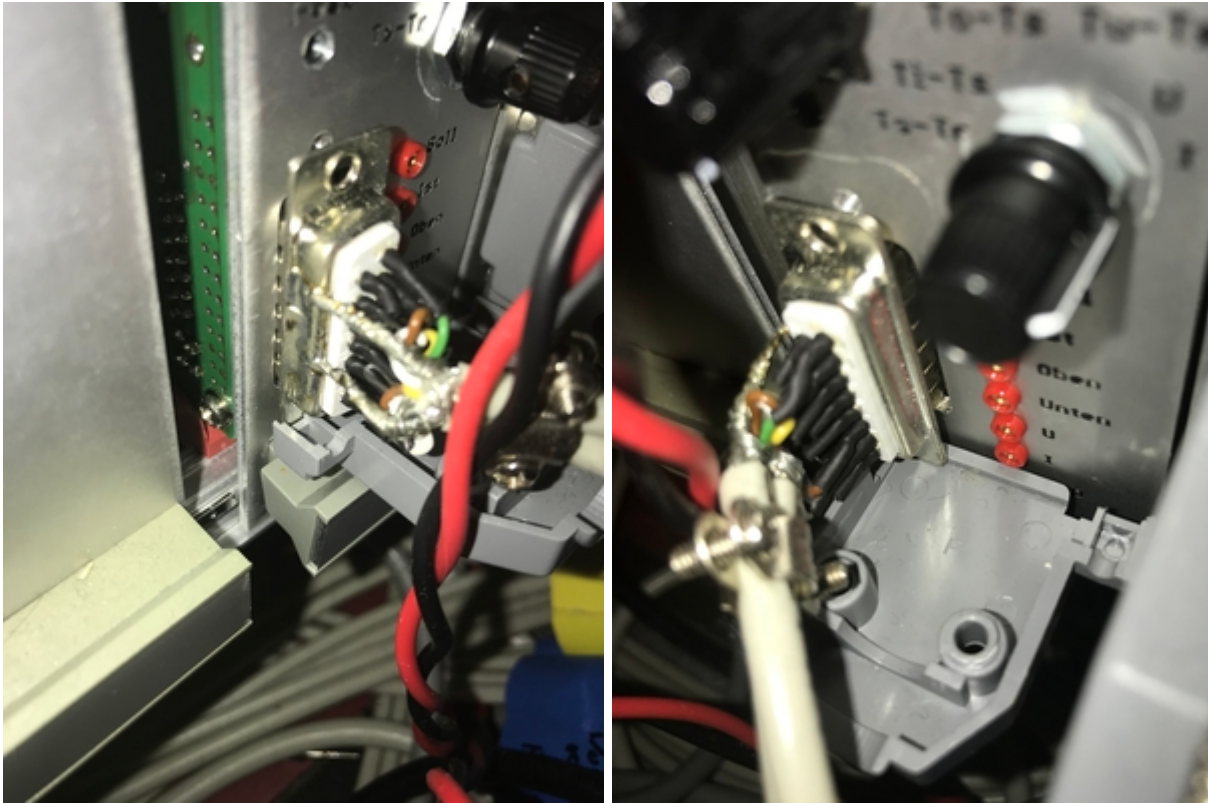

From:
<https://iqwiki.iqo.uni-hannover.de/> - IQwiki

Permanent link:
https://iqwiki.iqo.uni-hannover.de/doku.php?id=groups:mg:project_ptb-cavity:labelling_of_the_cables&rev=1508424942

Last update: 2017/10/19 14:55

