


Ring-down Box

Application of the ring-down box

You can measure the finesse of a resonator with the ring-down box **without** locking the resonator!

Advantages

1. super fast (see characterization)
2. without locking the resonator

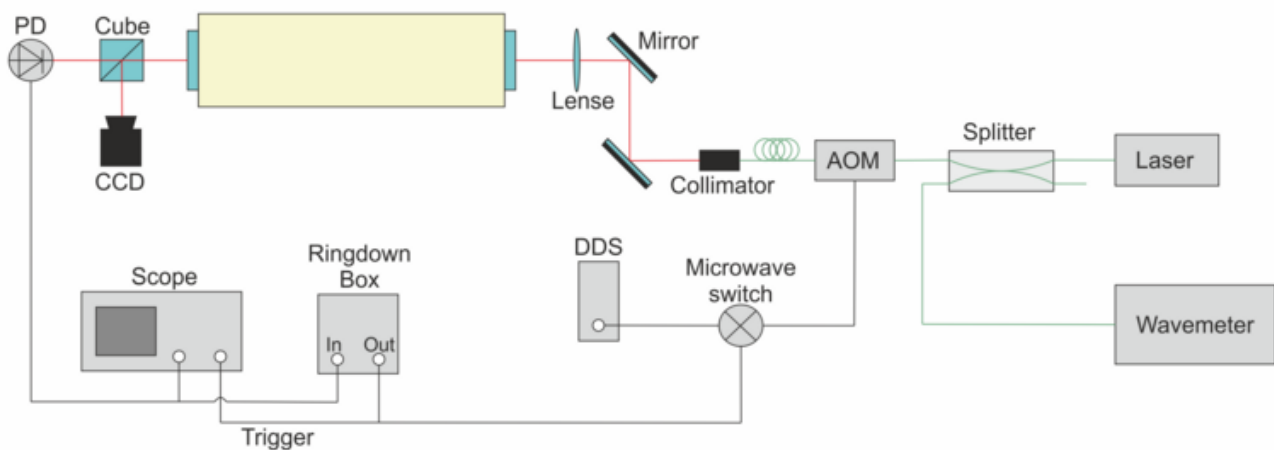

Measurement Method

Evaluation

Use this formula to analyse the datapoints:

$$y(x) = A \cdot \exp(-x/t) + y_0 \text{ with } x := \text{time}, t := \text{delay time}$$


Afterwards calculate the finesse with $F = 2\pi \cdot t \cdot \text{FSR}$ with $\text{FSR} := \text{free spectral range}$.

Electronic setup

Explanation of the operating principle

- Electronic drawing (PDF-file)

<fc #ff0000>Bilder rein mit dem Kurbven etc.</fc>

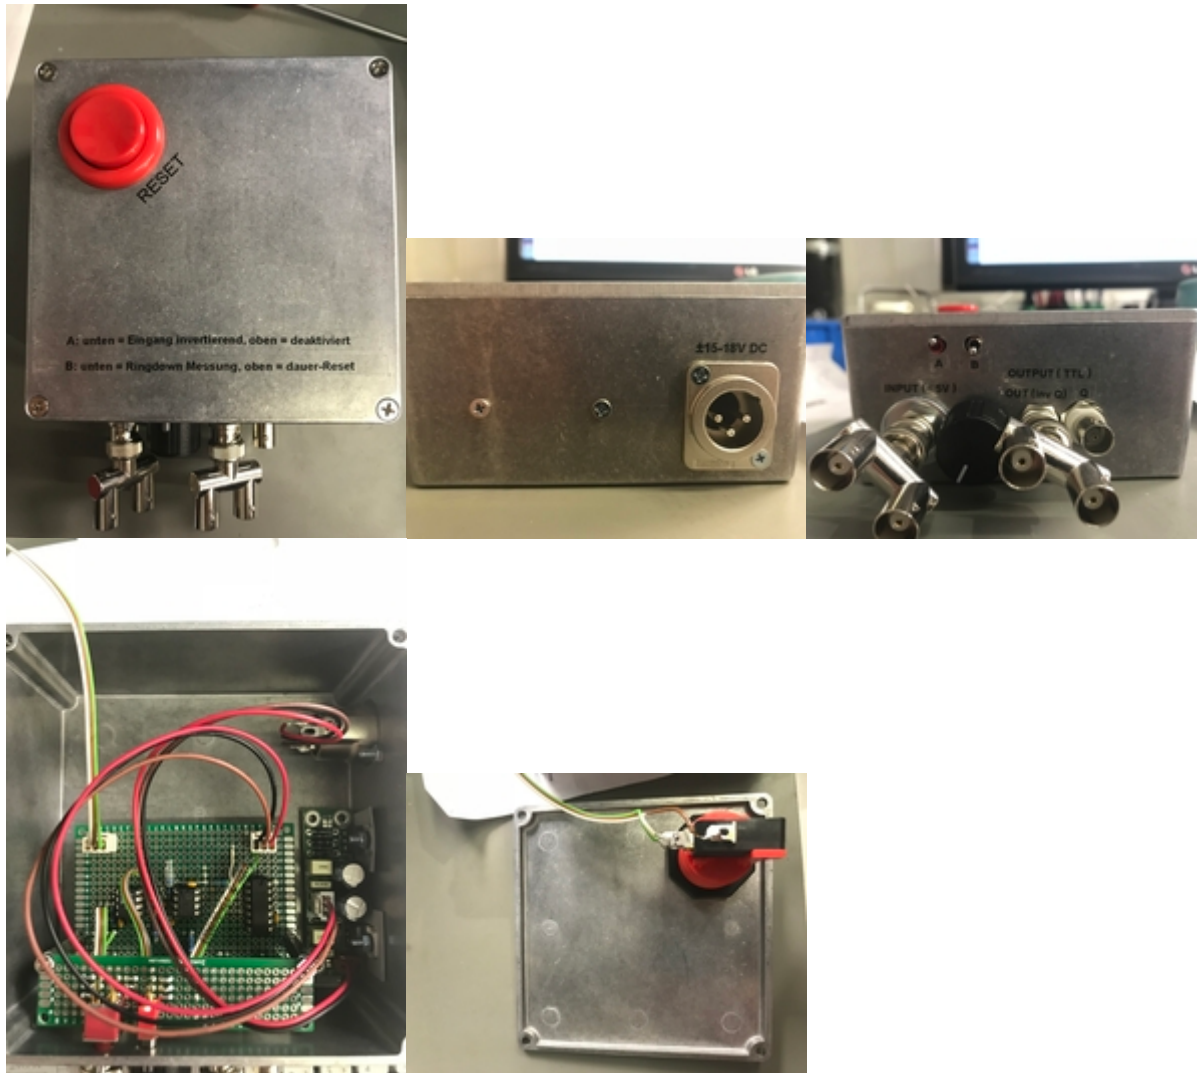

Characterization



List of components

- Inverter: LT1363
 - Invert negativ input voltage to positiv
 - Datasheet_LT1363
 - Power supply: +/-5V
- Comparator: AD8561
 - Compare input voltage and threshold value
 - Datasheet_AD8561
 - Power supply: +/-5V
 - High speed timing: 7ns @ 5V
- Flip-Flop: SN74HC74
 - Output of trigger
 - Datasheet_SN74HC74
 - Power supply: +5V

- High speed timing: 15ns
- 1x XLR connector
- 1x Power supply +/-5V
- 1x single switch
- 1x double switch
- 3x BNC connectors
- 1x Potentiometer
- 1x big red button
- 2x 8-pin holder
- 1x 14-pin holder
- 3x PSK 3-pin cables
- 5x 100n capacitors
- some resistors (3x 100k, 1x 4.7k, ...)
- 1x Al-box
- 2x PCB's

Microwave switch

- Control of RF signal to the AOM
- Mixer typ: SRA-1+ ([Datasheet_SRA-1+](#))
- 1x Resistor (100 Ohm)
- 2x diodes (typ: 1N4748)
- 1x diode (typ: Z3,9V)
- 3x BNC connectors
- 1x Al-Box

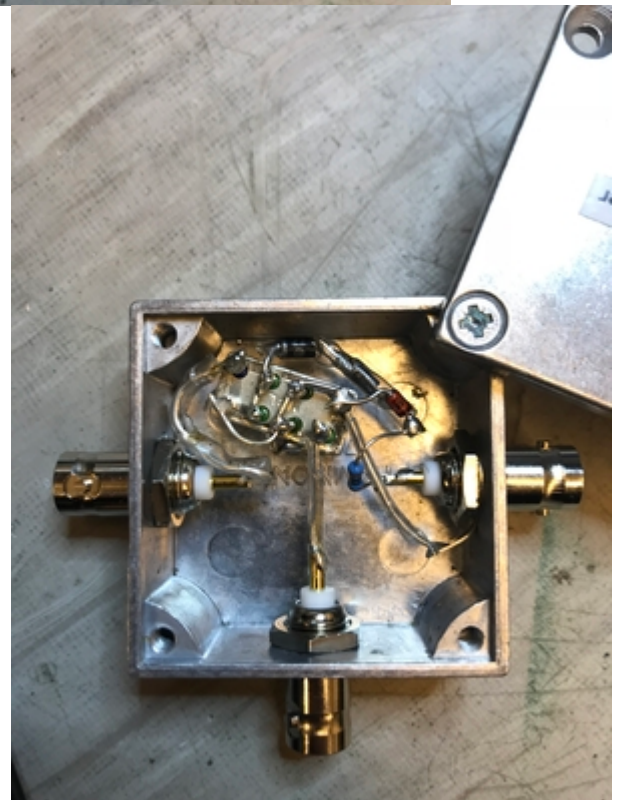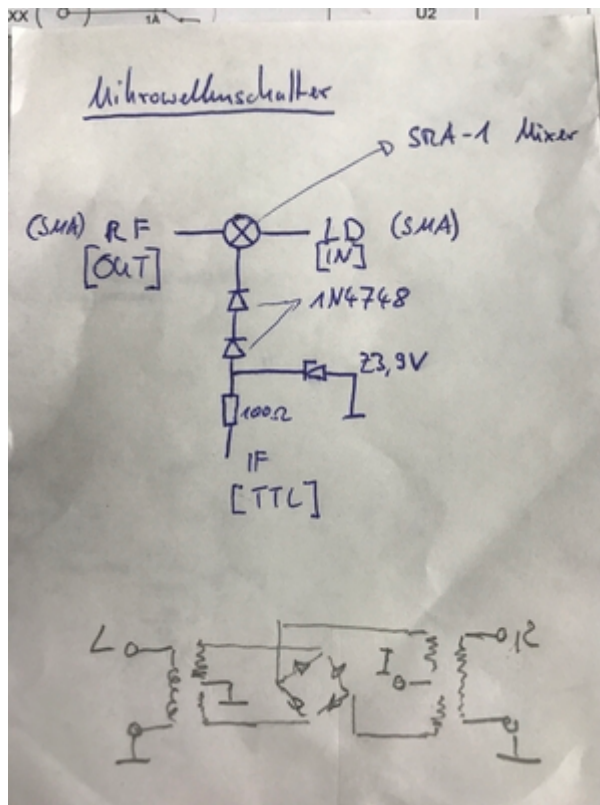

From:
<https://iqwiki.iqo.uni-hannover.de/> - IQwiki

Permanent link:
https://iqwiki.iqo.uni-hannover.de/doku.php?id=groups:mg:ring-down_box&rev=1516291009

Last update: **2018/01/18 15:56**

