


# Temperature Controller


The temperature controller used for regulating and stabilizing the temperature of the laser diode is a **Meerstetter TEC-1091-NTC56k-Pinheader** - [IQWiki entry](#)

## Current Setup - Rack Mount





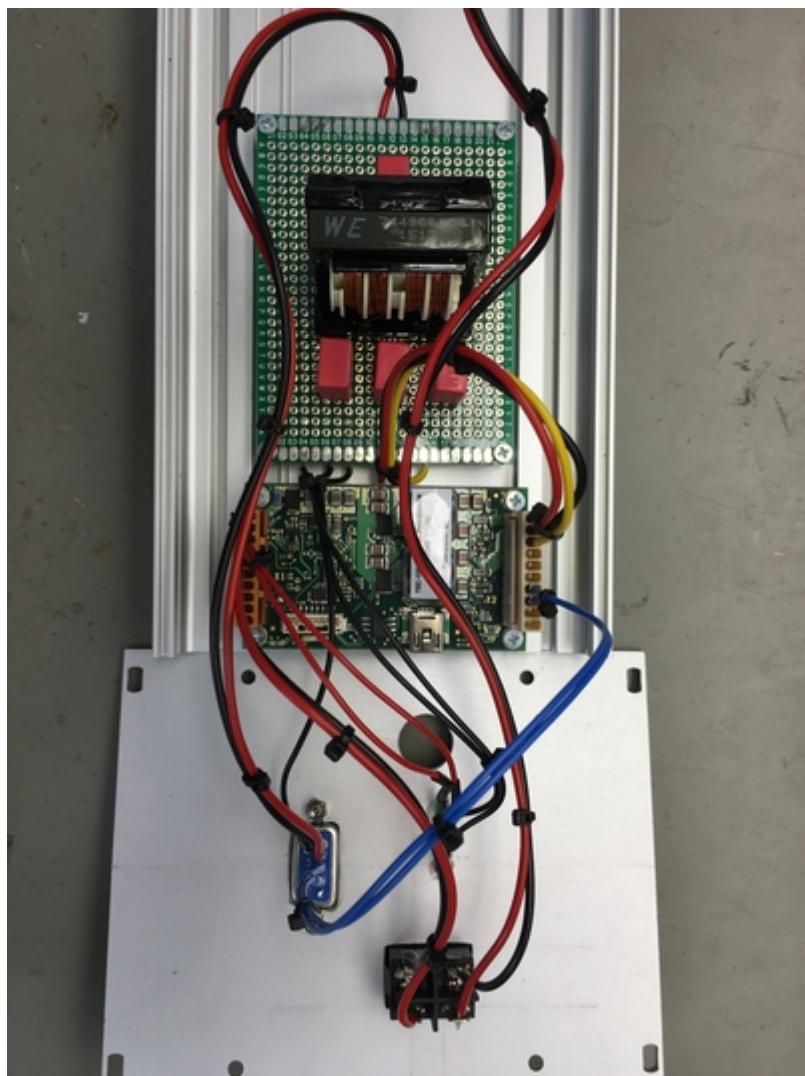


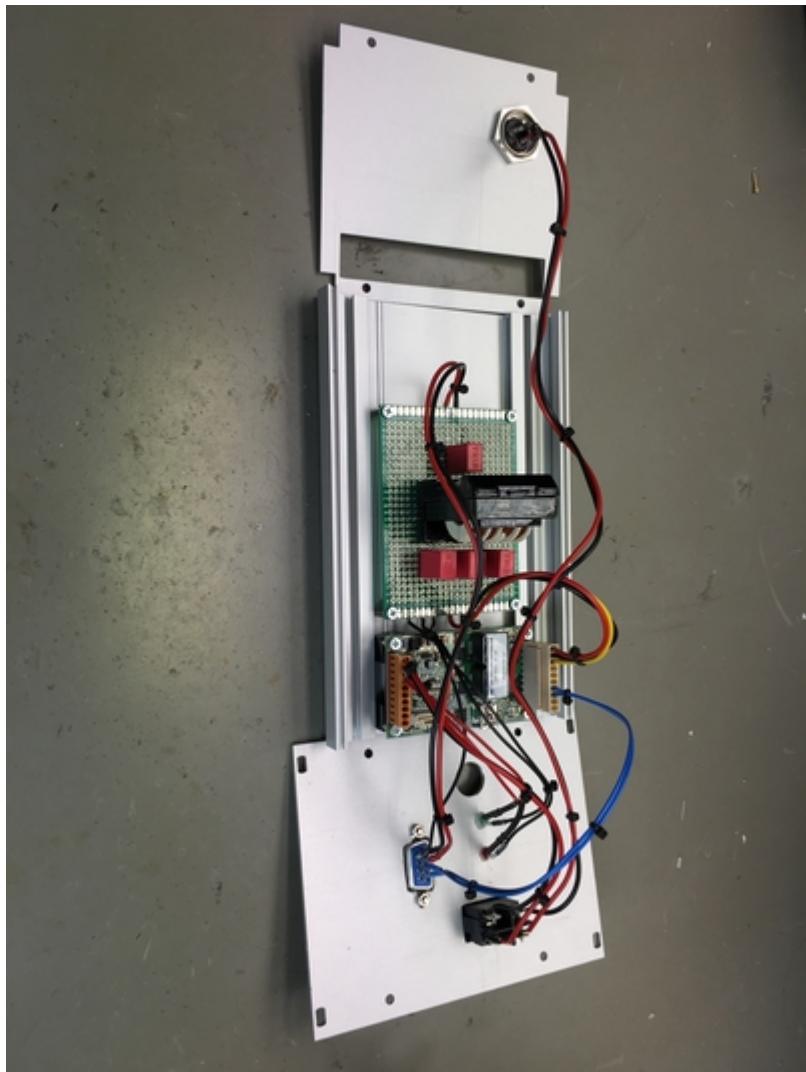

---

## Old setup - in a Box

### Overview

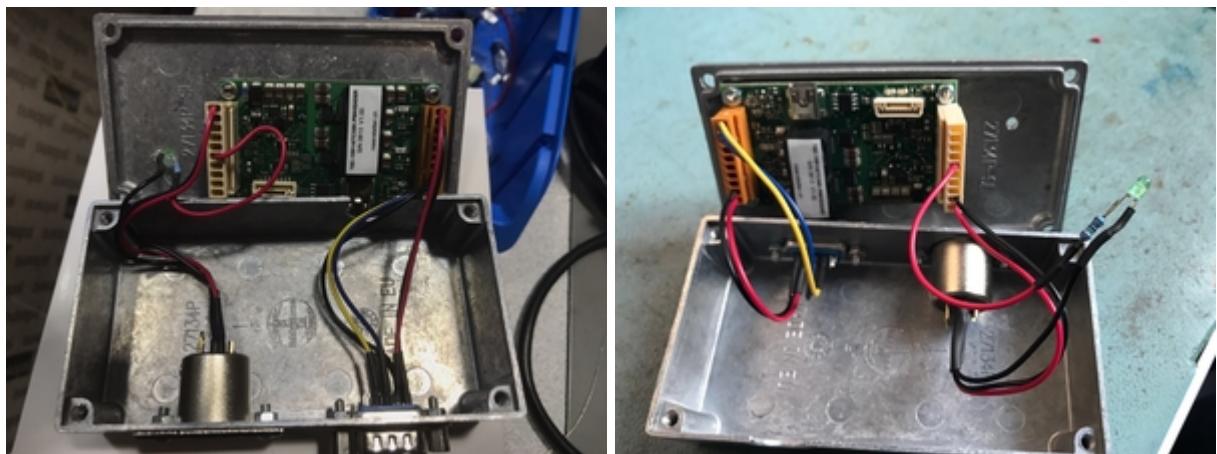



- The **subD9 connector** is used to connect the Meerstetter to the Thorlabs mount for the laser diode and is configured specially for that purpose.
- The **XLR socket** is used to connect the Meerstetter to a power supply.
- The **Mini-USB socket** is used to connect the Meerstetter to a PC for configuration and data logging.

There is also a **status LED** connected to the Meerstetter. If the LED is constantly on, the wanted temperature is reached. A blinking LED means that the system is currently ramping towards the wanted temperature and if the led is off, there is an error or the Meerstetter is currently turned off.

## Power Supply


The voltage range with which the Meerstetter can be powered is 5-24V DC, currently it is driven with **18V DC**. The power supply should be capable of delivering **4A**. Always use a **seperate power supply** for powering the Meerstetter.

## Connections within the Case

### Current Connections

Currently the connections are as shown in the table below:

Socket	Pin Name	Connected To	Explanation
X1	VIN	XLR Plus	connections for the power supply
	GND	XLR GND	
	RES4	LED Anode	
X2	OUT +	SUB D Pin 4	TEC (+)
	OUT -	SUB D Pin 5	TEC (-)
	OBJ T° UA	SUB D Pin 3	NTC (-)
	OBJ T° UB	SUB D Pin 2	NTC (+)
	Shielding	SUB D Pin 9	GND for shield of cable

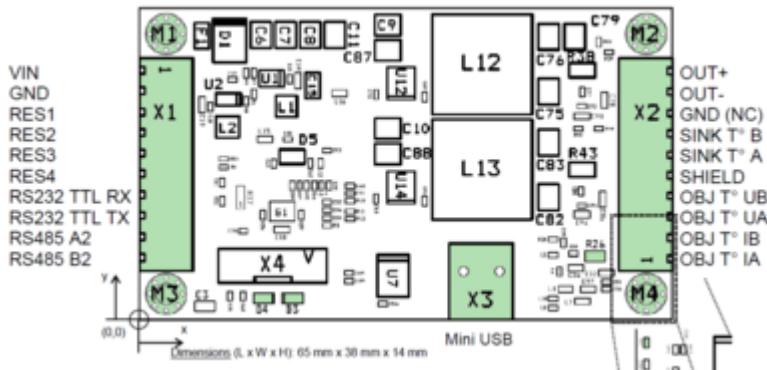

Different connectors were used for X1 and X2:

PSK for X1

JAE for X2



The SUB-D connector is wired up **especially** for the thorlabs mount. It is probably not compatible with other systems that use a SUB-D connector!

## Previous Connections


These were the **previous connections**. Differing connections were marked yellow.

Socket	Pin Name	Connected to	
X1	VIN	XLR Plus	connections for the power supply
	GND	XLR GND	
	RES4	LED Anode	
X2	OUT +	SUB D Pin 4	TEC (+)
	OUT -	SUB D Pin 5	TEC (-)
	<hi #fff200>OBJ T° IB</hi>	SUB D Pin 3	NTC (-)
	<hi #fff200>OBJ T° IA</hi>	SUB D Pin 2	NTC (+)
	<hi #fff200>OBJ T° UB</hi>	SUB D Pin 9	GND for shield of cable

## Status LED

### Current Setup

An extra LED is installed at the "RES4"-Pin at the X1 side with a 2,4 kΩ resistor and connected to GND.



The Meerstetter is currently set up to control the LED like this:

LED	Meaning
constantly on	target temperature is reached
blinking	ramping towards target temperature
off	error/Meerstetter is off


To add another status LED to the Meerstetter, you can follow this [step-by-step guide](#)

## Other Modifications



What's the meaning of this?

On the back side of the circuit board at these two places, two soldering points have to be soldered together, so that 2 wires can be used to connect the NTC.

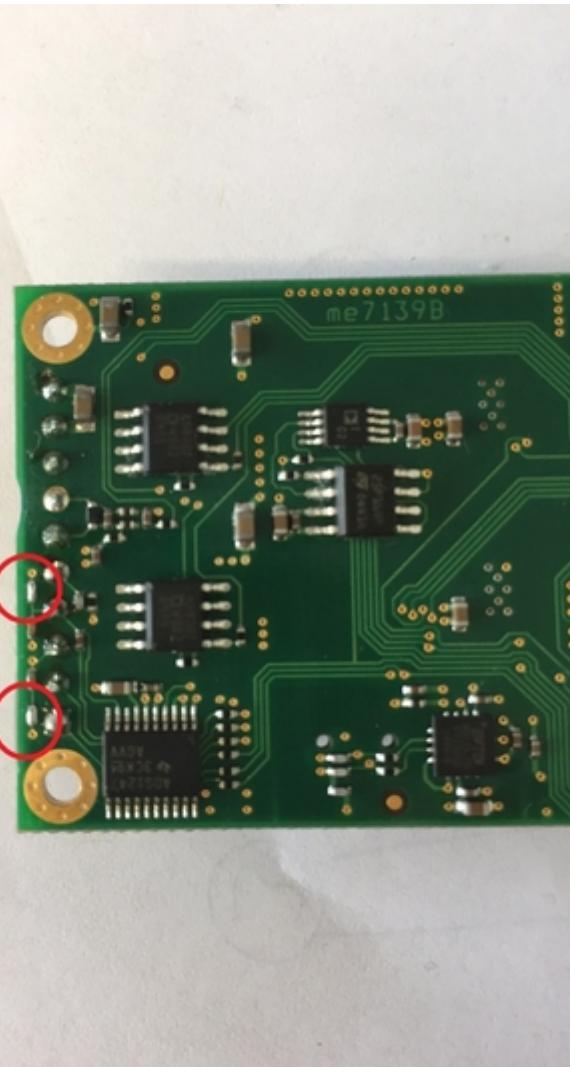

Last update:  
2018/05/08 groups:mg:temperature\_controller https://iqwiki.iqo.uni-hannover.de/doku.php?id=groups:mg:temperature\_controller&rev=1525768416  
08:33

From:  
<https://iqwiki.iqo.uni-hannover.de/> - IQwiki

Permanent link:  
[https://iqwiki.iqo.uni-hannover.de/doku.php?id=groups:mg:temperature\\_controller&rev=1525768416](https://iqwiki.iqo.uni-hannover.de/doku.php?id=groups:mg:temperature_controller&rev=1525768416)

Last update: **2018/05/08 08:33**

